

Presets 3.0 Update Patch (DJ's only)

Step 1: Download

1. Download the preset file and save it locally on your hard drive where you can find it easily after the download is complete.
2. Find the update file package and extract (un-ZIP) the package. Inside the ZIP file you will find a .wav file and a PDF file of these instructions.

Step 2: Burn

1. Using a CD-writing application installed on your CD-writing capable personal computer, burn the wav audio file onto a CD-R disc. If given the options, burn with the Finalize (or Disc-at-Once) option enabled. Turn off any normalize function that the software may offer.

Step 3: Connect

NOTE: Check the coaxial digital audio output settings of your DVD player before beginning. Turn off any 3D, normalization, spatialization, and compression features that the DVD player may have. Ensure that "bit stream" is selected in the menu setting for the digital audio output format.

1. Access the back of the *compatible DVD player and connect one side of an analog stereo RCA cable to the DVD player's coaxial digital audio output connector. This may also be labeled as a PCM connection. If the player only has an optical digital audio output, an optical to coaxial converter must be used.
2. Connect the other end of the audio patch cable to the Data IN jack (RCA-type jack with a white center) of the model I power stand.

*Most DVD players produced in the last 5 years contain a coaxial digital audio output (PCM) connection which is required to successfully perform the preset update. Please refer to your DVD players Owner's Manual or inspect the back panel of the player to confirm compatibility.

Step 4: Upgrade the Presets

1. Turn the Power switch on the power stand to Off .
2. Insert the preset CD into the DVD player. Press the STOP button twice.
3. Turn the Power switch on the power stand to On . Wait for the Power LED on the power stand to go steady green.
4. Press PLAY on the DVD player.



5. Watch and wait. After about 8 seconds the Power LED on the power stand will blink rapidly green (about 10 times per second). The power stand is receiving upgrade information. This normally lasts for about 10 seconds.
6. Soon after, the Power LED should blink green at a slower rate (about twice per second). This would indicate that the upgrade was successful. If you are getting other results please visit the troubleshooting section.
7. Press STOP on the DVD player.
8. Turn the Power switch on the power stand to Off .
9. Unplug the digital audio cable from the DVD player and power stand.
10. Turn the Power switch on the power stand to On. Check for a green steady Power LED on the power stand. If you are getting other results please visit the troubleshooting section.

Congratulations and enjoy the new capabilities loaded into your system. Please visit the Musicians Forum and share your experiences with the product!

If you had difficulties applying this update, please visit the troubleshooting section or contact the Live Music Product & Technical Support Team at (877) 335-2673 for assistance.